

How to Use the Co-Driver Function

Step 1

Log in and select the HOS page.



Step 2

Select the Driver option







Step 3

Select yes



Step 4

You should now see the two orange bars

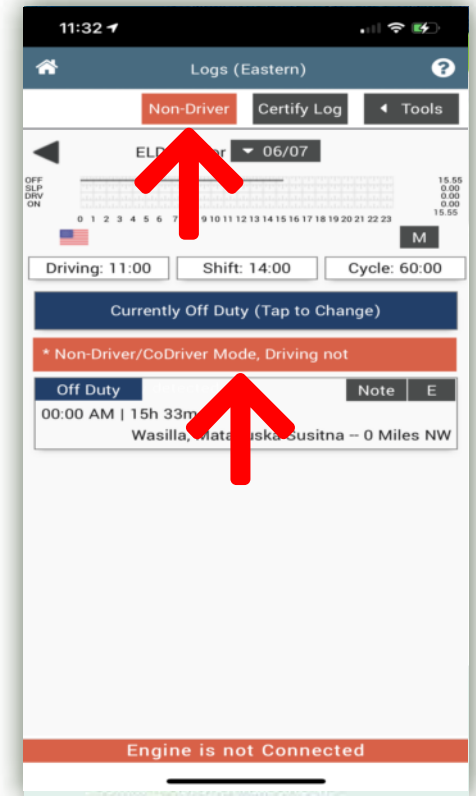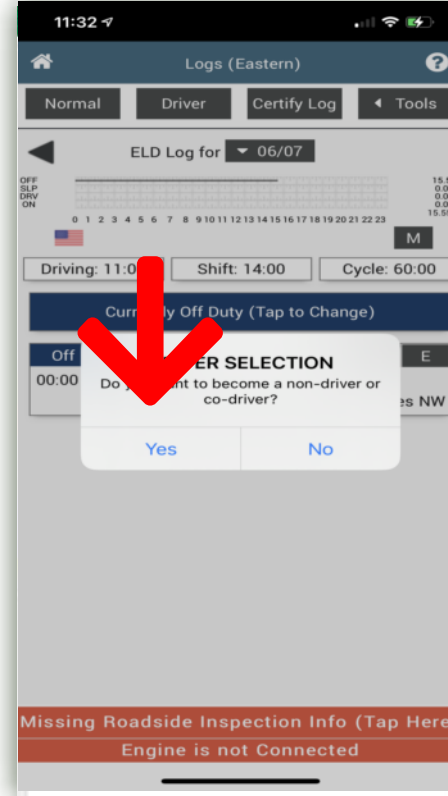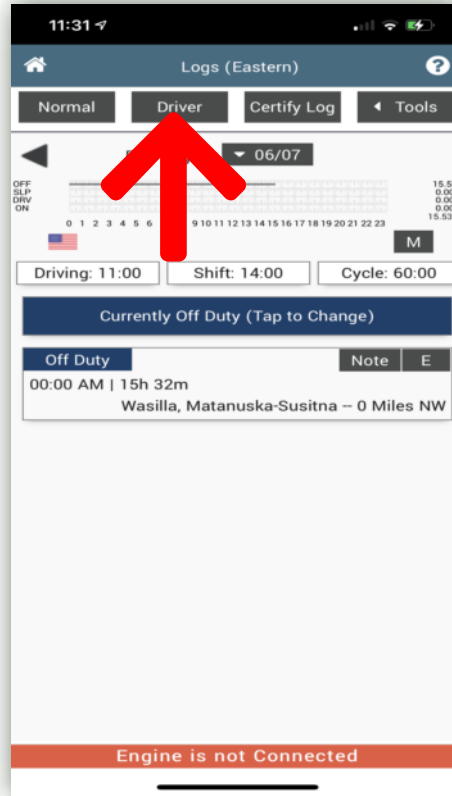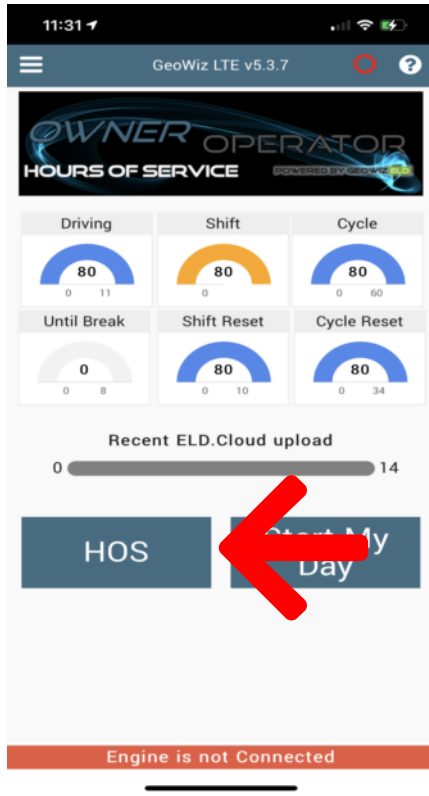

How to Use the Co-Driver Function

Step 5



Step 6



Step 7





Step 8

**Select Tools
Tap Manifest**

**Enter the
Co-driver's
Name**

**For separate devices
have co-driver repeat
steps 1-4**

**To share a device
have only the
current driver
logged in**

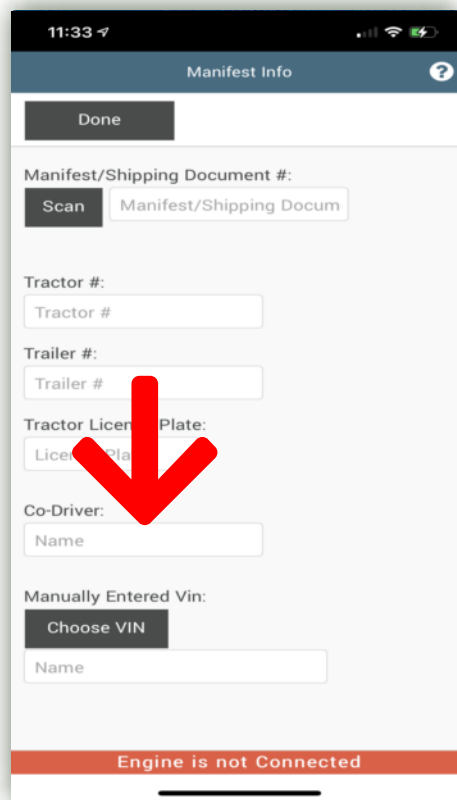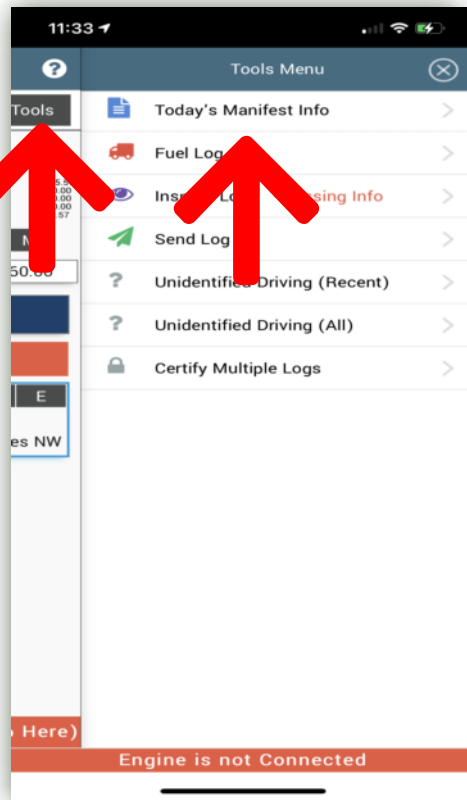

Note:

Make sure that each driver has their own account. Two drivers cannot share the same account as this will cause errors and can lead to violations.