

ਪੈਸੇਂਜਰ ਅਤੇ ਪ੍ਰਾਪਰਟੀ ਕੈਰੀਗਿ ਦੇ ਵਿਚਕਾਰ ਸਵਿਚ ਕਿਵੇਂ ਕਰੀਏ

ਕਦਮ 1

ਉਪਰਲੇ ਖੱਬੇ ਕੋਨੇ ਵਿੱਚ ਮੀਨੂੰ
ਆਈਕਨ ਤੇ ਟੈਪ ਕਰੋ



ਕਦਮ 2

"Quick Setup" ਤੇ
ਟੈਪ ਕਰੋ







ਕਦਮ 3

"Get Started" ਤੇ
ਟੈਪ ਕਰ



ਕਦਮ 4

ਟਾਈਮ ਫ੍ਰੇਮ ਵਿਚੋਂ ਸਹੀ ਡਿਓਟੀ
ਸਟੇਟਸ ਨੀ ਚੁਨੋ

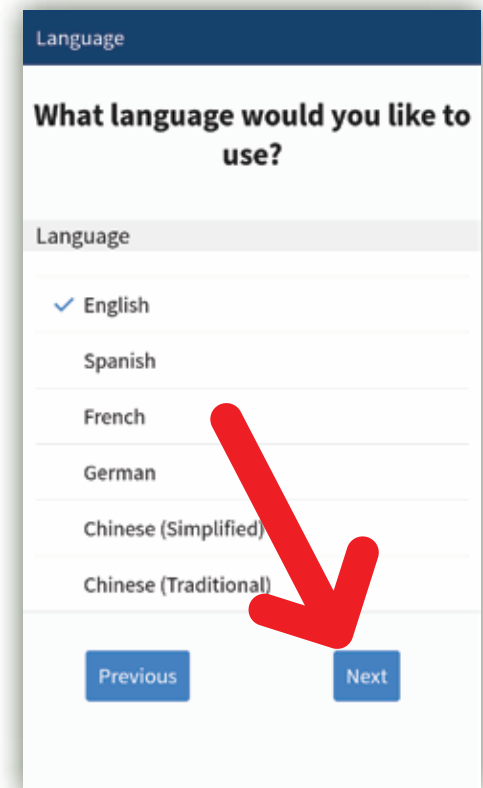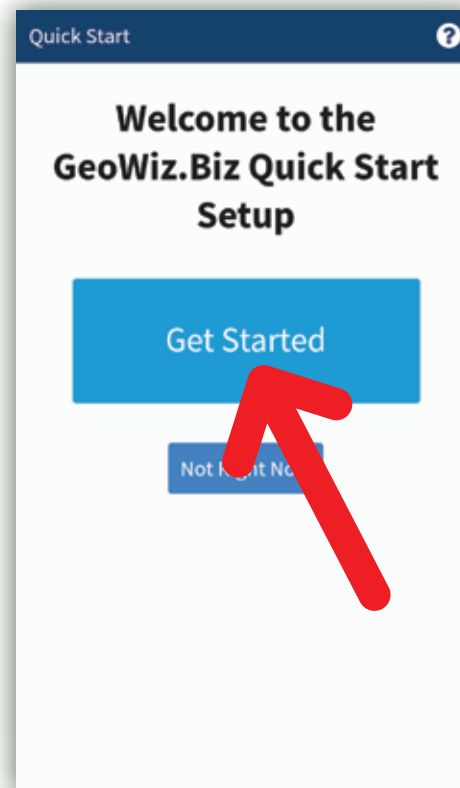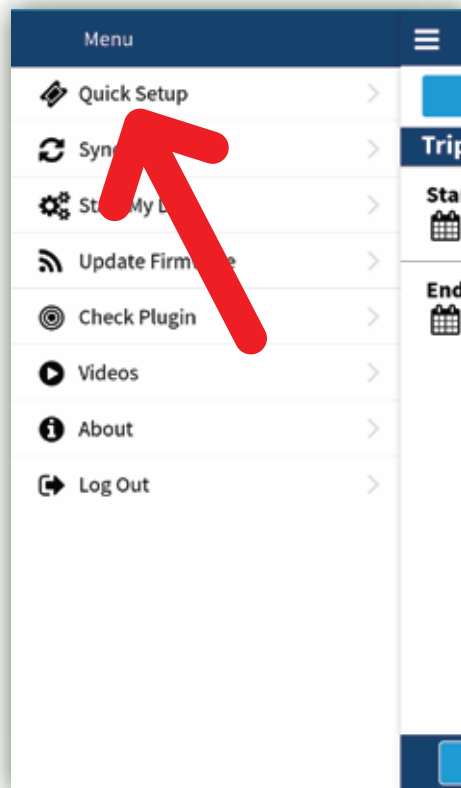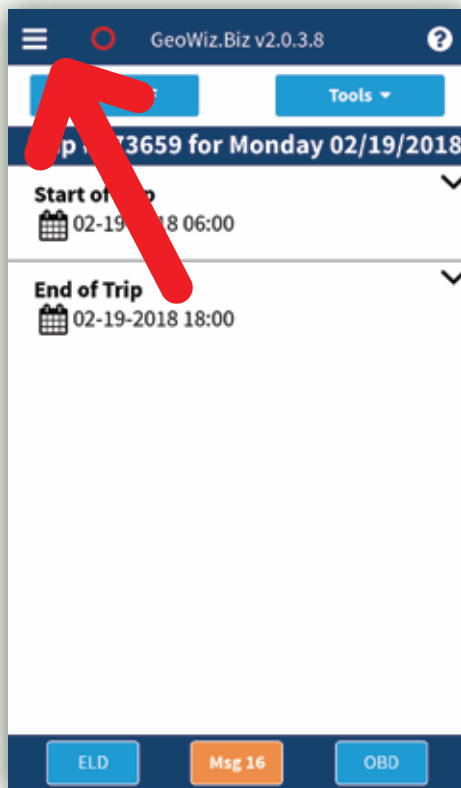

ਪੈਸੇਂਜਰ ਅਤੇ ਪ੍ਰਾਪਰਟੀ ਕੈਰੀਗਿ ਦੇ ਵਿਚਕਾਰ ਸਵਿਚ ਕਿਵੇਂ ਕਰੀਏ

ਕਦਮ 5

ਉਹ ਪਲੱਗਇਨ ਚੁਣੋ ਜੋ ਤੁਸੀਂ ਵਰਤ ਰਹੇ ਹੋ



ਕਦਮ 6

ਯਾਤਰੀ ਜਾਂ ਸੰਪਤੀ ਚੁਣੋ
ਆਪਣੇ ਚੱਕਰ ਦੀ ਚੋਣ ਕਰੋ



ਕਦਮ 7

ਆਪਣੇ ਰੀਸਟਾਰਟ ਚੱਕਰ ਅਤੇ
ਅਪਵਾਦ ਦੀ ਚੋਣ ਕਰੋ ਅਤੇ
“Next” ਦਬਾਓ.



ਕਦਮ 8

“I’m Ready
To Start” ਦਬਾਓ.

Engine Connection

Tap on the picture for the Plugin you are using

None - I don't need an engine connection

✓ Button - j1939/j1708

Bluetooth - j1939/j1708

Driving Rules

Select the rules you operate under

Rules

Type:

✓ Property Carrying

Passenger Carrying

Country:

✓ United States

Canada

Cycle:

✓ US 60 Hour/7 Day

US 70 Hour/8 Day

70 Hour/7 Day

Driving Rules

Restart Cycle:

None

24-hour Restart

✓ 34-hour Restart

36-hour Restart

Exceptions

16 Hour Short-Haul Exception §395.1 (o)

Short-haul operations—(1) 100 air-mile radius driver §395.1

SC&RA Exemption

Agricultural Exemption 50 air mile radius driver §395.1(k)

Previous Next

Set Password

Enter your new password

Password:

Password

4-digit Code to Lock OOT Inspection Mode:

Previous I'm Ready to Start